

Run a Manual Cycle



Press & hold 'Stop'. Timer shows. Select new cycle with 'Timer' or press & hold 'Stop' to end.

Run an Auto Cycle



'Extend' time - press to extend. Set timer press 'Start'

'Finish' press to end cycle.

Stop a Cycle

Press & hold 'Stop', 'Finish' or 'Reset' for 3 seconds until the progress blocks fill. The cycle will not stop unless all three blocks have been filled.



Silence an Alarm

Load Alarm - press the green 'Run' button to continue the cycle.



Fault Alarm - press the 'Mute' button to silence then 'i' button for more information.



Know Your Colours



Information

Pressing the 'i' button will give more detail on the screen currently shown.



Cleaning

For all cleaning instructions please refer to your company maintenance & cleaning manual.