

FVINO400HW

Installation & Operating Instructions



Foster Refrigerator
Oldmedow Road
Kings Lynn
Norfolk
PE30 4JU

Tel: 01553 691122
Fax: 01553 691447
Website: www.fosterrefrigerator.co.uk
Email: sales@foster-uk.com

a Division of 'ITW (UK) Ltd'
FV400HW /OP/ 0808



Cabinet Installation

Important:

To the installer: Installation of these units should be carried out by a competent person and the appropriate codes of practice adhered to, thus ensuring safe installation.

Pass to the user: do not discard this document: it contains important guidelines on Operation, Loading, Cleaning and Maintenance and should be kept for reference.

Disposal Requirements

If not disposed of properly all refrigerators have components that can be harmful to the environment. All old refrigerators must be disposed of by appropriately registered and licensed waste contractors, and in accordance with National laws and regulations.

1 Positioning and Unpacking



Unpacking: The unit is delivered on a pallet and shrink-wrapped. Documentation is inserted into a clear pocket inside the unit. Carefully remove the protective plastic film from the unit exterior making sure that any sharp instrument used does not cause damage, plus remove any quality labels.

Do not install the unit in an open space or where it may be exposed to rain. Place the unit in a well ventilated area away from a heat source including direct sunlight, radiators and air conditioning units and away from entrances and exits. The cabinet should be installed on a level surface, ensure the unit is level by adjusting the leveling feet.


Clean the cabinet prior to usage.

Clean the cabinet surfaces and the interior with mild liquid detergent before using the cabinet following the manufacturer's instructions. Rinse with clean water and dry thoroughly before switching the unit on.

2 Wine Storage Options

Multi temperature offers the possibility to keep wines at the right service temperature. Please refer to the table below with the advised temperature for each wine category.

To preserve and age your wines choose the Mono Temperature option and set the temperature for 12°C.

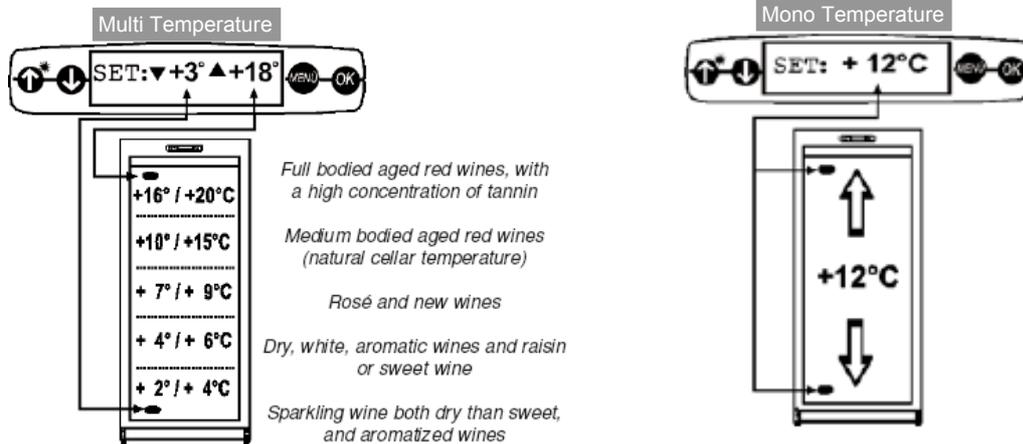


3 Start Up & Operation

Once the cabinet is in place leave it for 1 hour before turning on. If the cabinet has been laid down during delivery do not switch on for 24 hours. After switching on the cabinet leave for two hours with the light off before loading.

Insert the fused plug into the wall socket and switch on the mains, the controller will display 'STAND BY'.

On receipt of the machine it will be necessary to set the controller to your particular requirements

4 Setting the Controller

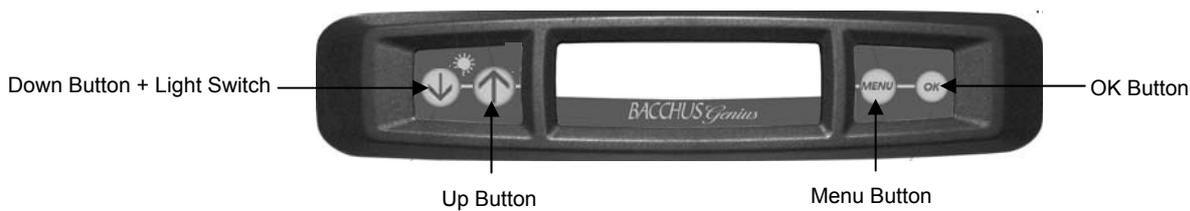

Press  and hold for 5 seconds

TURNING ON Will be displayed followed by **((((((()))**) and then **BACCHUS GENIUS**

5 Choose the Language

- 1/ **LANGUAGE**  ? Will be displayed
- 2/ Select the language from **ITALIAN** **FRENCH** **ENGLISH** **GERMAN** **SPANISH**
- 3/ Select using   the arrows
- 4/ Once the selection is made press  to confirm

6 Select the Mode of Operation

- 1/ **MODE**  ? Will be displayed
- 2/ Use   the to select either **MONO TEMP** for the single temperature range or **MULTI TEMP** for the multi temperature range.

MONO TEMP **Factory setting 8°C as a default**
Follow the instructions below to change the factory setting

- 1/ **Temperature**  ? Will be displayed
- 2/ Select the required temperature by pressing  or  and then press  to confirm
- 3/ **Temperature? OK** Will be displayed press  to confirm.

MULTITEMP **Factory setting 3°C to 18°C as a default**
Follow the instructions below to change the factory setting

- 1/ **Temperature**  ? Will be displayed
- 2/ Select the lower temperature required by pressing  or  once the preferred temperature has been selected press  to confirm.
- 3/ Select the higher temperature required by pressing  or  once the preferred temperature has been selected press to  confirm.

On completion **CONFIRMED** will be displayed, followed by **HELLO WORLD**

7 User Operation Guidelines

The cabinet will start automatically and display the set temperature.
To display the cabinet air temperature press  once.
Leave for two hours with the light off before loading

8 Main Menu Options

Only required if you need to change operation

To select a menu option press  and choose from the following

MODE	m1	TEMPERATURE	m2	Defrost	m3	Service	m4	TURN OFF	m5
-------------	-----------	--------------------	-----------	----------------	-----------	----------------	-----------	-----------------	-----------

MODE m1

Allows the selection of MONO or MULTITEMP options

Press either   to select and  confirm

TEMPERATURE m2

Allows the temperature to be adjusted

Press either   to select and  confirm

DEFROST m3

Allows a manual defrost

The refrigerator will defrost automatically but should an additional defrost be

required select this option and press 

SERVICE m4

Service engineer access

SWITCH OFF m5

To switch off the refrigerator select this option and press 

The screen will display **GOODBYE** followed by **STAND BY PUSH>>>**

Press  to start.

9 Interior Light

To turn the light on press the  'ON' will flash and the light will be on continuously.

To turn the light off press the  'OFF' will flash and the light will illuminate when the door is opened.

10 Alarms

High Temperature Alarm

HT will be displayed

The alarm will sound and can be silenced by pressing any button, however it will return after a pre-set period. If the unit returns to normal operating temperature the alarm will be cancelled automatically.

If this does not occur after 4 hours call your Foster authorised service company.

Low Temperature Alarm

LT will be displayed

The alarm will sound and can be silenced by pressing any button, however it will return after a pre-set period. If the unit returns to normal operating temperature the alarm will be cancelled automatically.

If this does not occur after 4 hours call your Foster authorised service company.

Door Open Alarm

The alarm will sound and can be silenced by pressing any button, however it will return after a pre-set period if the door is left open. The alarm message will continue to be displayed until cancelled by closing the door.

If the alarm is not cancelled by doing this call your Foster authorised service company.

11 Cleaning Instructions

Exterior + Glass Door: Clean using warm soapy water and dry with a soft cloth.

Interior: Clean the cabinet periodically by emptying the cabinet, turning off the power and open the door to allow the interior temperature to rise to the ambient temperature. When the interior has warmed up remove the shelves and clean the shelves and the interior using warm soapy water and dry with a soft cloth. Once dry replace the shelves and leave for one hour before loading.

Door Gaskets: These should be checked on a regular basis and replaced if damaged. To clean, wipe with a clean damp cloth and finally thoroughly dry before closing.